

Model SCM-2 STREAMING CURRENT METER W/ REMOTE SENSOR


Features

- ▶ Digital Display
- ▶ High/Low Alarms
- ▶ 4~20mA Output
- ▶ Zero Offset
- ▶ Sensitivity Adjustment

Precise Coagulant Dose Control for Water Treatment



Sensor Advantage

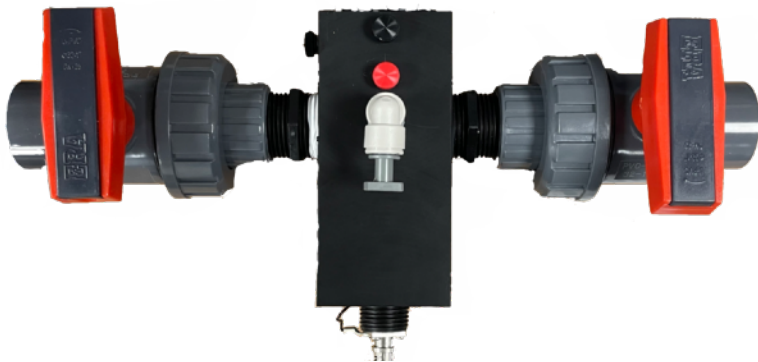

The Micrometrix® SCM features a Patented Wear Resistant Sensor design (US11,313,832). The Probe is “user serviceable” and eliminates many “wear factors” found in previous designs. The user can easily replace a disposable sleeve and piston within the sensor probe to restore accuracy and sensitivity. The Sensor also offers multi-mode operation for Self-testing, Titration and Cleaning. Micrometrix® SCMs have proven to offer years of reliable and trouble-free service.

Patented

Benefits

- ▶ Chemical Savings
- ▶ Maintain Water Quality
- ▶ Early Warning Protection
- ▶ Prevent Upsets
- ▶ Optimize Treatment
- ▶ Reduce Residuals
- ▶ Easily Retrofitted



Engineering Specifications

The instrument shall be a complete streaming current measurement system for continuous monitoring and control of coagulant dosage to assist in optimizing the water or wastewater treatment process. The instrument shall be two modules capable of 1000' separation. Both modules shall operate on 110VAC power. (Optional 230 VAC)


Sensor Module

The sensor shall receive a sample of treated water at a flow rate of 1~4 liters per minute. The sensor shall have a sample inlet of 3/4" and outlet of 1" barbed style fitting. The sample probe shall be connected with a thumbscrew for easy removal without the use of tools for inspection or service. The probe housing shall use a disposable Teflon sleeve, which may be replaced independently of the electrodes. The upper and lower electrode shall be independently replaceable to facilitate easy servicing of the probe. The sensor probe shall include two sets of spare pistons and sleeves.

Electronics Meter Module

The meter shall be housed in a non-metallic NEMA 4x housing suitable for outdoor mounting. The meter enclosure shall have a facility to use a lock or tamper resistant device to prevent unauthorized use. The meter shall provide an LED digital display of the streaming current value calibrated in millivolts with a range of -1000mV to +1000mV. The meter shall have control functions for 1) meter zero adjustment 2) continuous sensor sensitivity adjustment 3) internal amplifier gain adjustment 4) self diagnostic flashing LED sensor operation indicator 5) independent high and low alarm contact setpoint adjustments 6) High and low alarm LED indicators. The adjustment controls shall be recessed and require the use of a trimmer tool to minimize tampering by unauthorized personnel. The instrument shall be a Streaming Current Meter Model SCM-2 as manufactured by Micrometrix®

Specifications	Model SCM-2
Measurement	Streaming Current
Power	110 Vac / 230 Vac (Optional)
Range	-1000 to +1000 mV
Accuracy	0.10%
Display Type	LED - Digital
Flow Rate	1 ~ 4 Liters/Min (Standard) or 1 ~ 40 LPM (Optional)
Connection Type	3/4" Barb In 1" Barb Outlet
Response Time	1 Second
Self Diagnostic	Sensor LED
Probe Materials	Delrin, 316 SS, PTFE
Outputs	4~20mA, -10 ~ +10 V, 0~10V
Communication	Modbus (Optional)
Alarms	High / Low Relay Contacts
Zero Adjust	Full Range
Enclosure	NEMA 4x, IP 65
Mounting Holes	11.0" x 6.00"
Weight	20 lbs , 9 kg

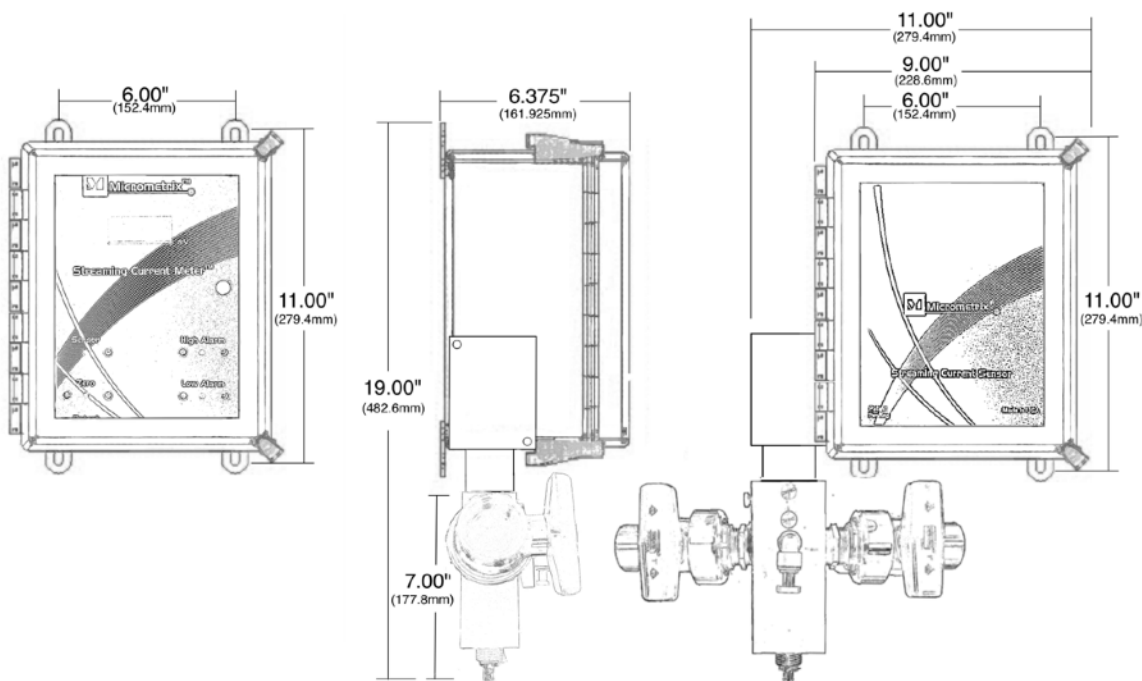

770.271.1330

micrometrix.com

contact@micrometrix.com

© 2022 Micrometrix®

All rights reserved